Customer Training Workshop Traveo™ II Chip Operational Modes



Target Products



Target product list for this training material


| Family Category | Series | Code Flash Memory Size |
|---|---------------|------------------------|
| Traveo™ II Automotive Body Controller Entry | CYT2B6 | Up to 576KB |
| Traveo II Automotive Body Controller Entry | CYT2B7 | Up to 1088KB |
| Traveo II Automotive Body Controller Entry | CYT2B9 | Up to 2112KB |
| Traveo II Automotive Body Controller Entry | CYT2BL | Up to 4160KB |
| Traveo II Automotive Body Controller High | CYT3BB/CYT4BB | Up to 4160KB |
| Traveo II Automotive Body Controller High | CYT4BF | Up to 8384KB |
| Traveo II Automotive Cluster | CYT3DL | Up to 4160KB |
| Traveo II Automotive Cluster | CYT4DN | Up to 6336KB |

Traveo™ II Operational Modes Overview



Overview

Traveo II can execute software in four different modes:

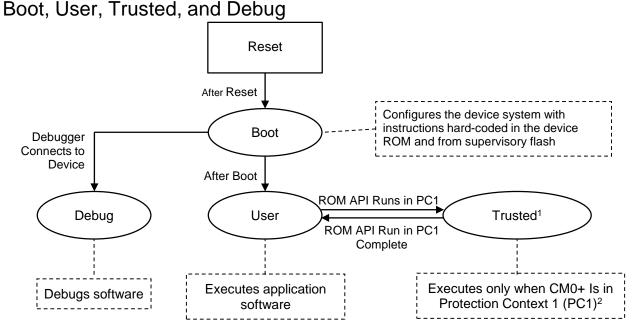

Hint Bar

Review TRM chapter 14 for additional details

Device power modes are different from Chip Operational modes. Review the Device Power Modes training section for additional details

Review the Device Security training section for additional details on Boot mode

Review the Program and Debug Interface training section for additional details on Debug mode

¹Trusted mode allows the execution of special subroutines stored in the device ROM, which cannot be modified by the user and are used to execute copyrighted code.

² In Traveo II, the ROM API runs in PC1 for safety and security reasons so that the ROM API has the minimum privilege required to perform its functions.

Operational Modes Summary



Operation modes are summarized in the following table

| | Main Operation | | | | Privilege Level | | |
|-----------------|-----------------|--------------|------------------------|----------|--|-------------------------|---------------------------|
| | ROM Flash | Flash | User Software from Fla | | Trusted ROM Code Execute Only When CM0+ Is In Protection Context 1 | Privileged Operation | Unprivileged Operation |
| Boot Execute | Boot Execute | Interrupt | Debugging | | | | |
| Boot Mode | ✓ | ✓ | | | | ✓ | |
| User Mode | | ************ | ✓ | | | ✓ | ~ |
| Trusted Mode | | | | | ~ | ✓ | |
| Debug Mode | | | ~ | ~ | | ~ | ~ |

Hint Bar

Review TRM chapter 14 for additional details


Review TRM chapter 13 for additional details on protection states.

Review the Device Security training section for additional details on protection context

Review the CPU Subsystem training section for additional details on privileged and unprivileged operation



Part of your life. Part of tomorrow.

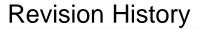



| Revision | ECN | Submission Date | Description of Change |
|----------|---------|-----------------|---|
| ** | 6123648 | 04/06/2018 | Initial release |
| *A | 6324692 | 09/28/2018 | Added page 2 and the note descriptions of all pages |
| *B | 6649384 | 08/07/2019 | Updated page 2 |
| *C | 7073093 | 01/22/2021 | Updated page 2 |