




## QUICK START GUIDE

# PSoC™ 62S2 Evaluation Kit

CY8CEVAL-062S2


### Kit contents

1. PSoC™ 62S2 Evaluation Board
2. USB Type-A to Micro-B cable
3. Four jumper wires (four inches each)
4. Two jumper wires (five inches each)
5. Quick start guide (this document)

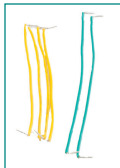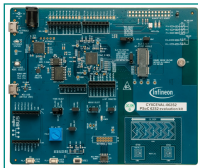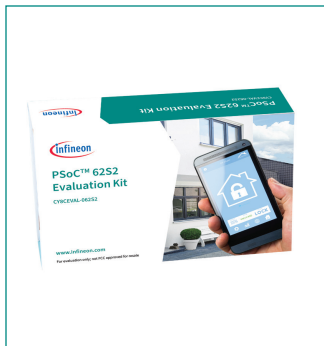

[www.infineon.com/CY8CEVAL-062S2](http://www.infineon.com/CY8CEVAL-062S2)



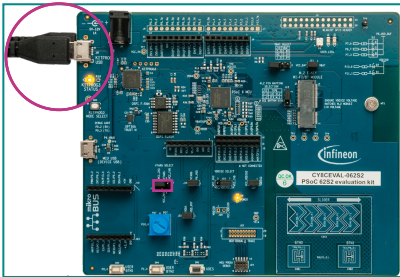

1


USB cable connected to the KitProg3 USB connector

## Before you start

1. Ensure that you have the following:
  - PC with USB port
  - UART terminal software such as Tera Term or Minicom
2. Visit the [kit webpage](#) to download and install the required software.

## Connect and power up the board

1. Ensure that jumper J18 is at position 3–5 to select 3.3 V.
2. Connect the KitProg3 USB connector (J9) to your PC.
3. Wait for the driver installation to complete.

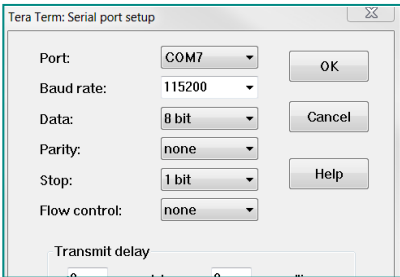

2

USB-to-UART COM port setup

## Connect the kit with the UART terminal software

1. Open the UART terminal software and connect to the kit's USB-to-UART COM port with the following settings:
  - Baud rate: 115200, Data: 8 bit, Parity: None, Stop bit: 1 bit, Flow control: None
2. Press the XRES button (SW1) to reset the device.


## Run the pre-programmed code example

1. Observe the “Hello World!!!” message on the serial terminal and confirm that the user LED blinks at 1 Hz.
2. Press the **Enter** key to pause or resume blinking the user LED.

## Next steps

Visit the [kit webpage](#) for information on code examples supported for this kit and kit documentation.

## PSoc™ 62S2 Evaluation Board details

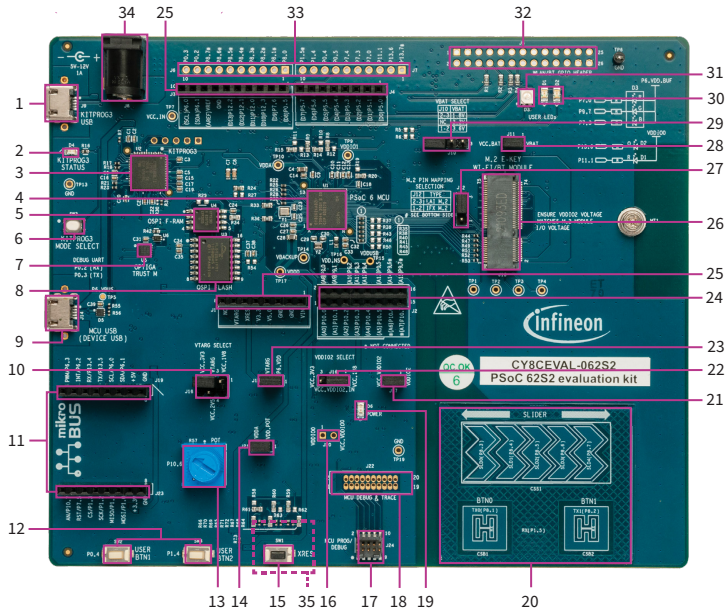


- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1 KitProg3 USB connector (J9)</li> <li>2 KitProg3 status LED (D4)</li> <li>3 KitProg3 (PSoc™ 5LP) programmer and debugger (CY8C5868LTI-LP039, U2)</li> <li>4 PSoc™ 6 MCU (CY8C624A2I-S2D44, U1)</li> <li>5 QSPI F-RAM (CY15B104QSN, U4)</li> <li>6 KitProg3 programming mode selection button (SW3)</li> <li>7 OPTIGA™ Trust M security controller (SLS32AIA, U5)</li> <li>8 512-Mbit serial NOR flash memory (S25FL512S, U3)</li> <li>9 PSoc™ 6 MCU USB device connector (J14)</li> <li>10 System power (VTARG) selection jumper (J18)</li> <li>11 Headers compatible with mikroBUS by Mikroelektronika (J19, J23)</li> <li>12 PSoc™ 6 MCU user buttons (SW2, SW4)</li> <li>13 Potentiometer (R57)</li> <li>14 Potentiometer connection jumper (J21)</li> <li>15 PSoc™ 6 MCU reset button (SW1)</li> <li>16 PSoc™ 6 MCU VDDIO0 current measurement jumper (J20)*</li> <li>17 PSoc™ 6 MCU 10-pin SWD/JTAG program and debug header (J24)</li> <li>18 PSoc™ 6 MCU debug and trace header (J22)*</li> </ol> | <ol style="list-style-type: none"> <li>19 Power LED (D6)</li> <li>20 CAPSENSE™ slider (CSS1) and buttons (CSB1, CSB2)</li> <li>21 PSoc™ 6 MCU VDDIO2 current measurement jumper (J17)</li> <li>22 PSoc™ 6 MCU VDDIO2 power selection jumper (J16)</li> <li>23 PSoc™ 6 MCU VTARG current measurement jumper (J15)</li> <li>24 Power header compatible with Arduino Uno R3 (J1)</li> <li>25 I/O headers compatible with Arduino Uno R3 (J2, J3, J4)</li> <li>26 M.2 interface connector (J13)</li> <li>27 Custom M.2 interface selection jumper (J12)</li> <li>28 VBAT current measurement jumper (J11)</li> <li>29 VBAT power selection jumper (J10)</li> <li>30 PSoc™ 6 MCU user LEDs (D1, D2)</li> <li>31 RGB LED (D3)</li> <li>32 GPIO header (J5) for AIROCC™ Wi-Fi &amp; Bluetooth® combo chips*</li> <li>33 PSoc™ 6 MCU I/O headers (J6, J7)*</li> <li>34 External power supply VIN connector (J8)</li> <li>35 microSD card holder (J27)**</li> </ol> |
|--|--|

\* Footprint only, not populated on the board

\*\* Component is located at the bottom side of the board

# PSoC™ 62S2 Evaluation Board pinout details

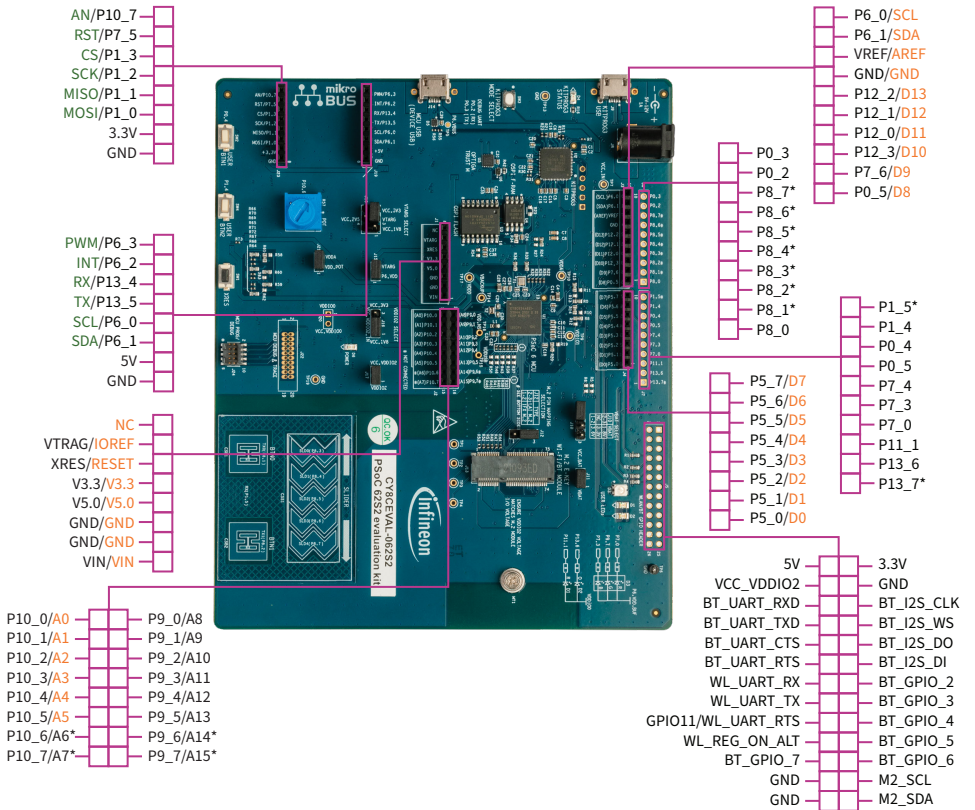

## LEGEND

- I/Os compatible with Arduino Uno R3
- PSoC™ 6 MCU I/Os
- Interface compatible with mikroBUS by Mikroelektronika

Note: \* Not connected

For additional details, see the kit guide available on the Infineon [kit webpage](#).